


Service Manual

Ventilating Fan
(North America Market)

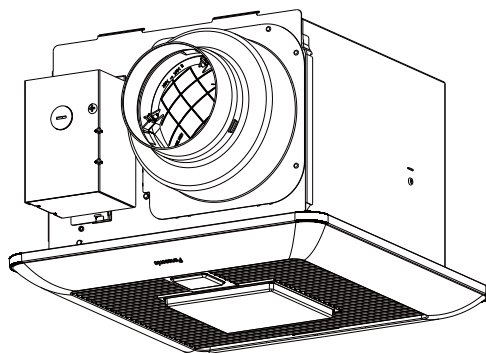

FV-0511VQCL1

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without the manufacturer's approval.

Please have a static electricity depletion process in place before handling these components..

Please use gloves when handling PCB parts during the repair process..

CONTENTS	PAGE
1.Specification	1
2.Parts Identification	2 ~ 4
3.Wiring Diagram	5
4.Parts List	6 ~ 7

1. Specification


Model No.	Air direction	Voltage (V)	Frequency (Hz)	Duct diameter (Inches)	Air volume at 0.1"WG (CFM)	Noise (sones)	Speed (rpm)	Power (W)	Weight lb. (kg)
FV-0511VQCL1	Exhaust	120	60	4 or 6	50	< 0.3	768	4.0	10.1 (4.6)
					80	< 0.3	867	6.1	
					110	0.4	1016	11.0	

HVI Certified performance based on HVI Procedures 915, 916, and 920.


Remark: We divide this model into Version A & Version B, because of different motor and Main PCB Section, please put attention with identification of parts when you request a service parts.

Parts for Version A

Motor

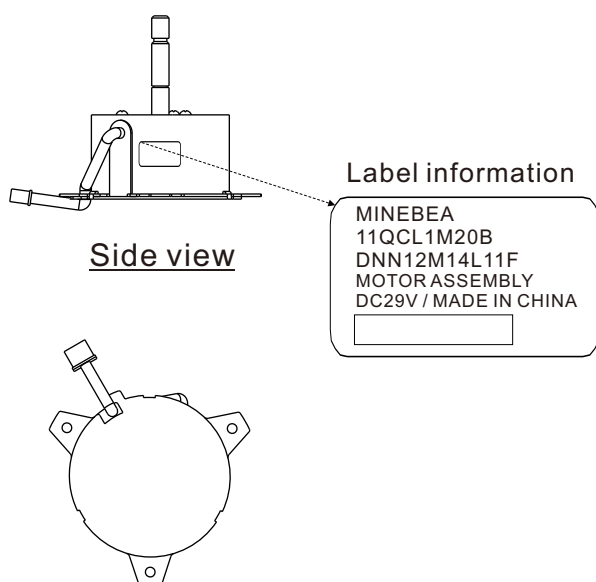


Main PCB Section

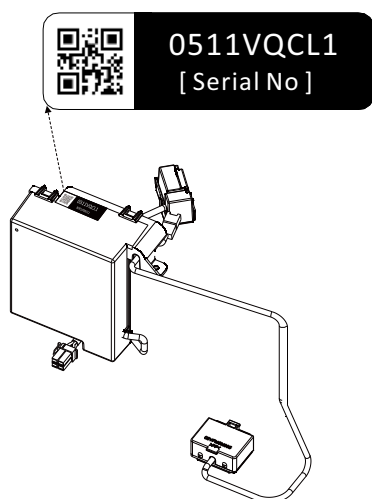


Parts for Version B

Motor

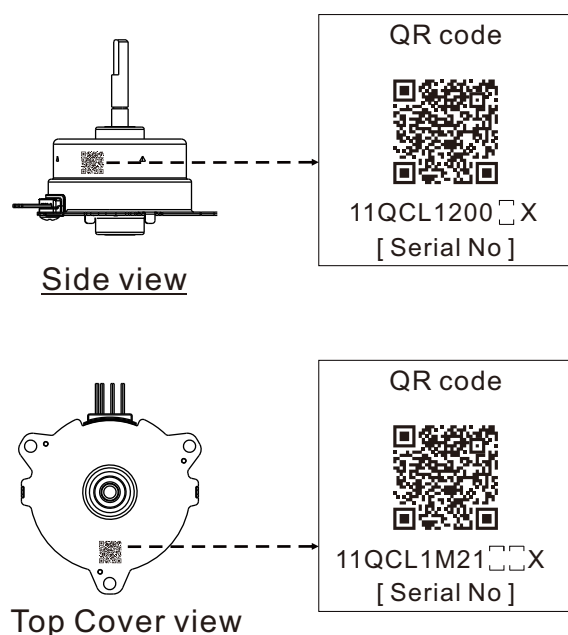

Main PCB Section

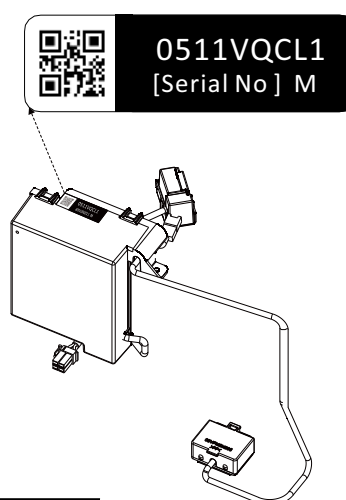


Motor	Main PCB	Judgment
Version A	Version A	(OK) Work
Version A	Version B	(NG) Do Not Work
Version B	Version B	(OK) Work
Version B	Version A	(NG) Do Not Work

2. Parts Identification

FV-0511VQCL1


Main Body Section

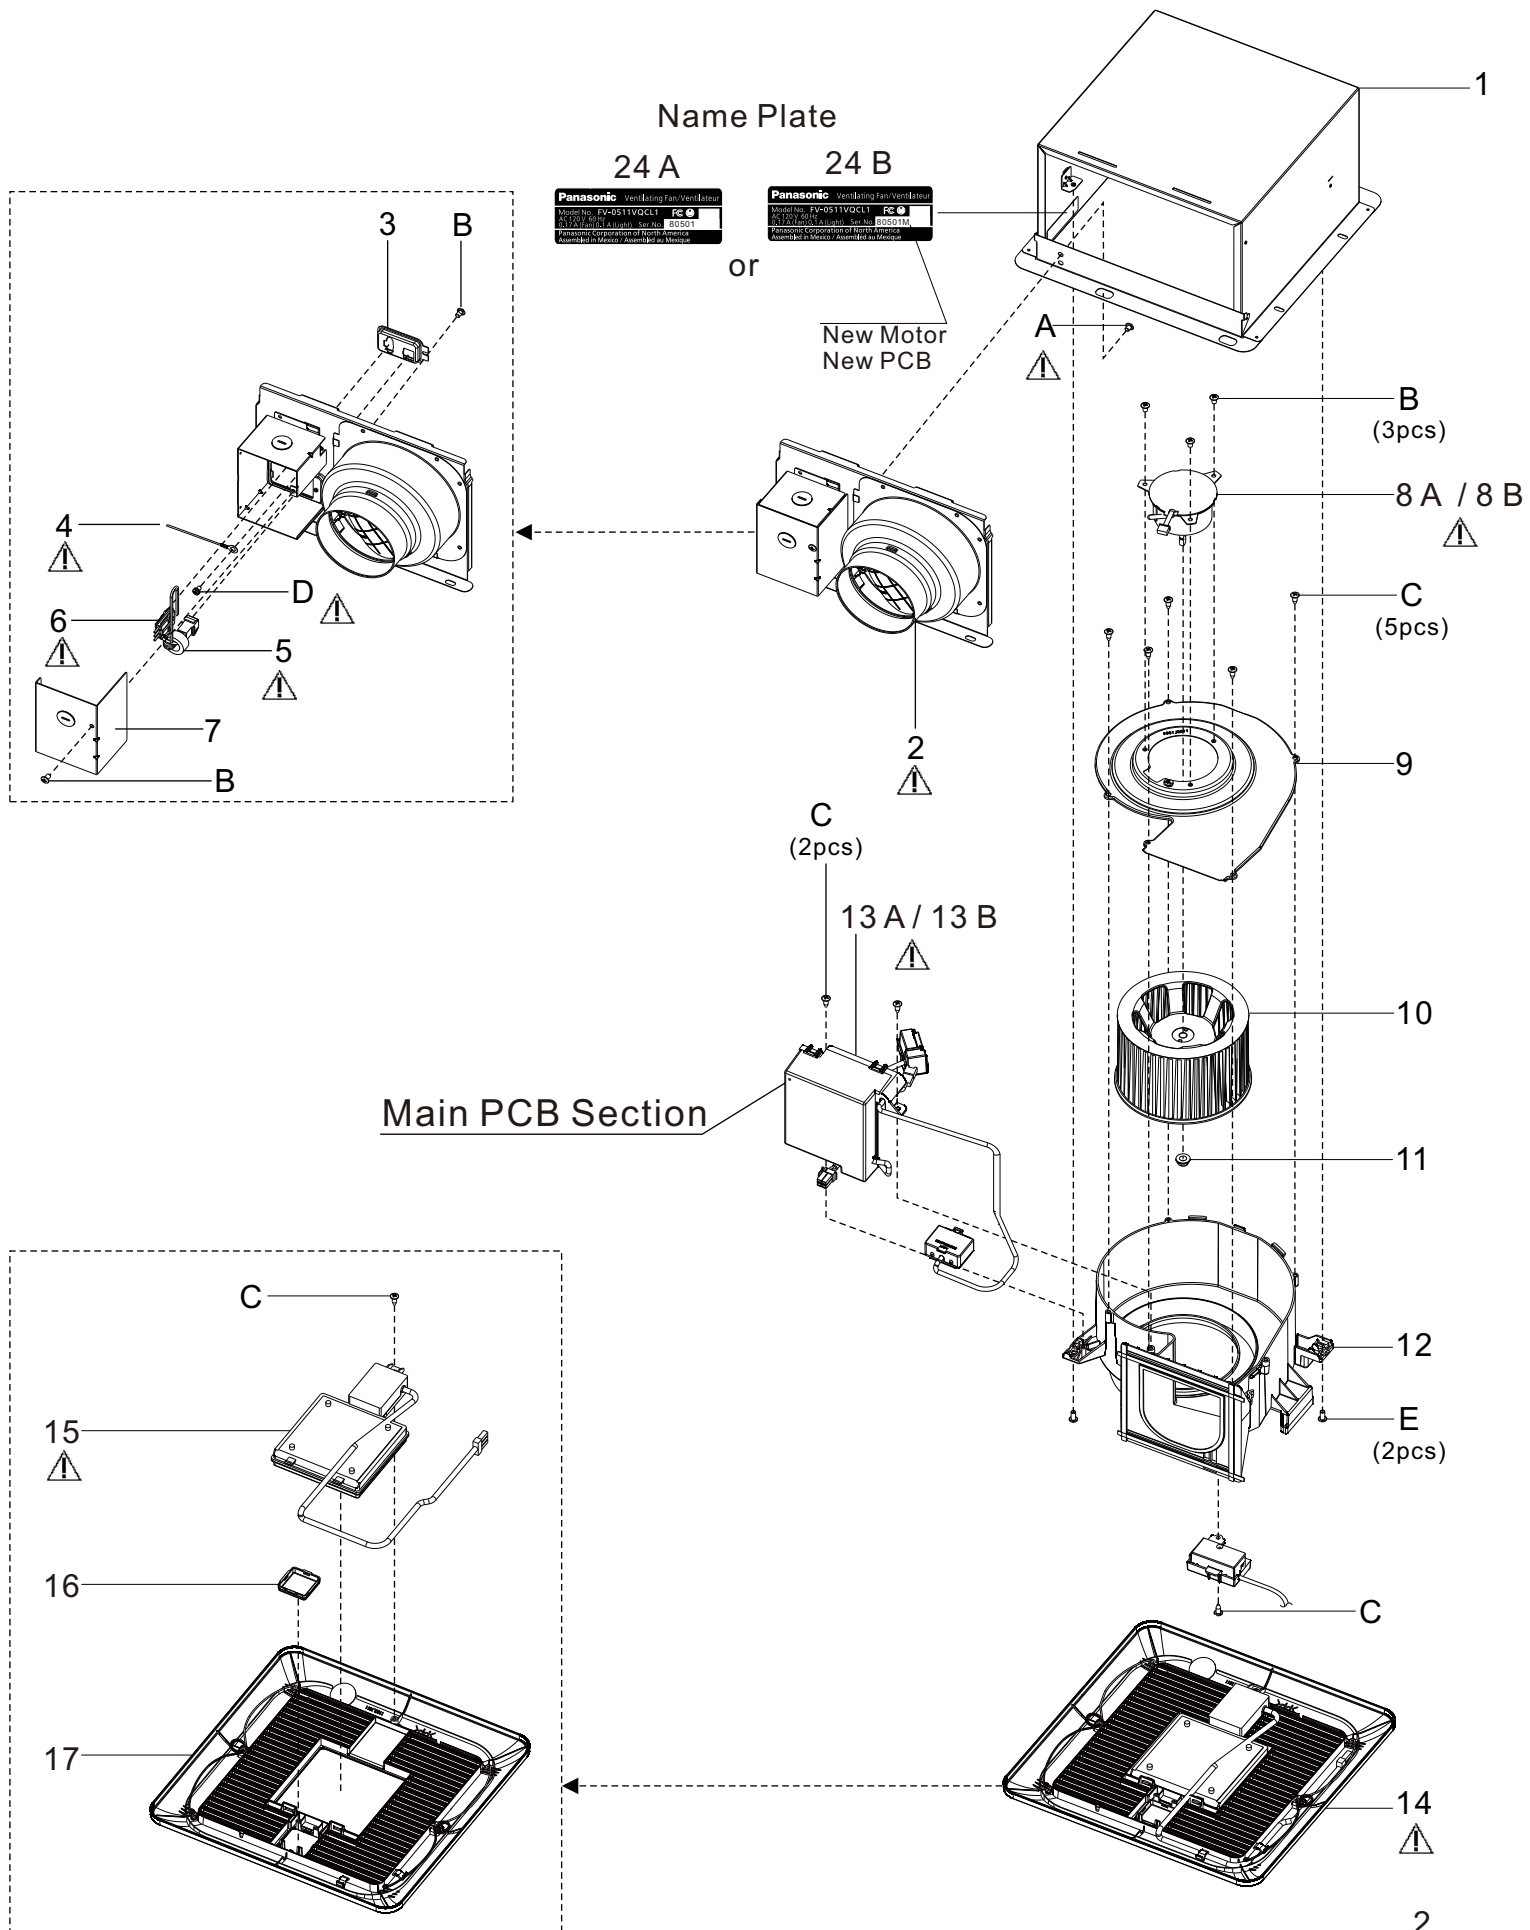


2. Parts Identification

FV-0511VQCL1

Main PCB Section

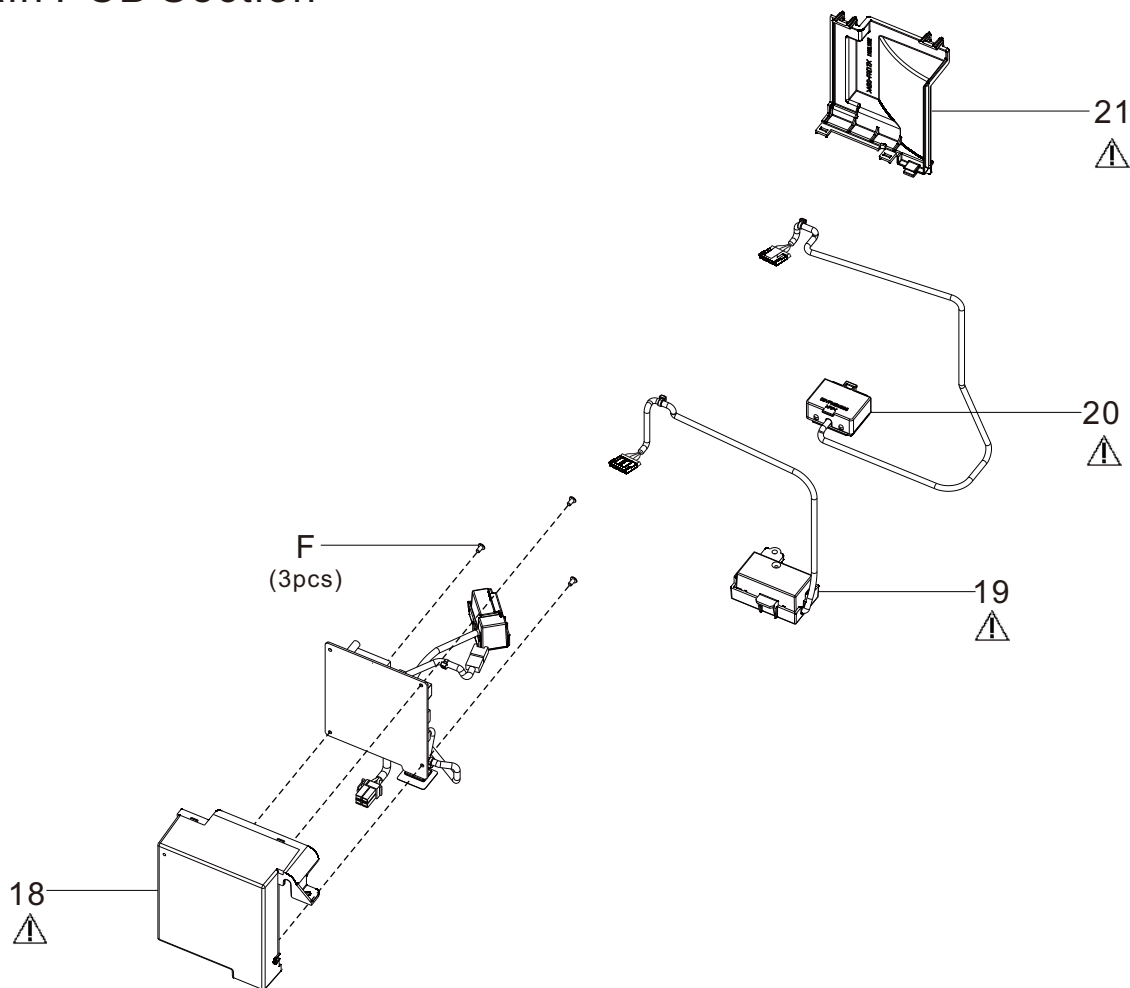

Main Label

 

WARNING:
1. Before service or cleaning unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally.
2. Acceptable for use over a bathtub or shower when installed in a GFCI protected branch circuit.
CAUTION:
To reduce the risk of injury to persons, install fan at least 2.1m (7 feet) above the floor.
ATTENTION:
1. Pour l'entretien ou le nettoyage, mettre l'appareil hors tension au niveau de la façade des commandes et du panneau de verrouillage des commandes afin d'éviter toute mise sous tension accidentelle.
2. Convient pour utilisation au-dessus d'une baignoire ou d'une douche si raccordé à un circuit de dérivation protégé aux normes GFCI.
3. Afin de réduire les risques de blessures corporelles, installer le ventilateur à au moins 2.1m (7 pieds) du sol.

Part for Version A



8 Means Year: 2018
05 Means Month
01 Means Day

 
Part for Version B



8 Means Year: 2018
05 Means Month
01 Means Day
M: In House MOTOR




For grounding, please keep the screw firmly
Pour la mise à la terre veuillez visser fermement





2. Parts Identification

FV-0511VQCL1

Packing Section

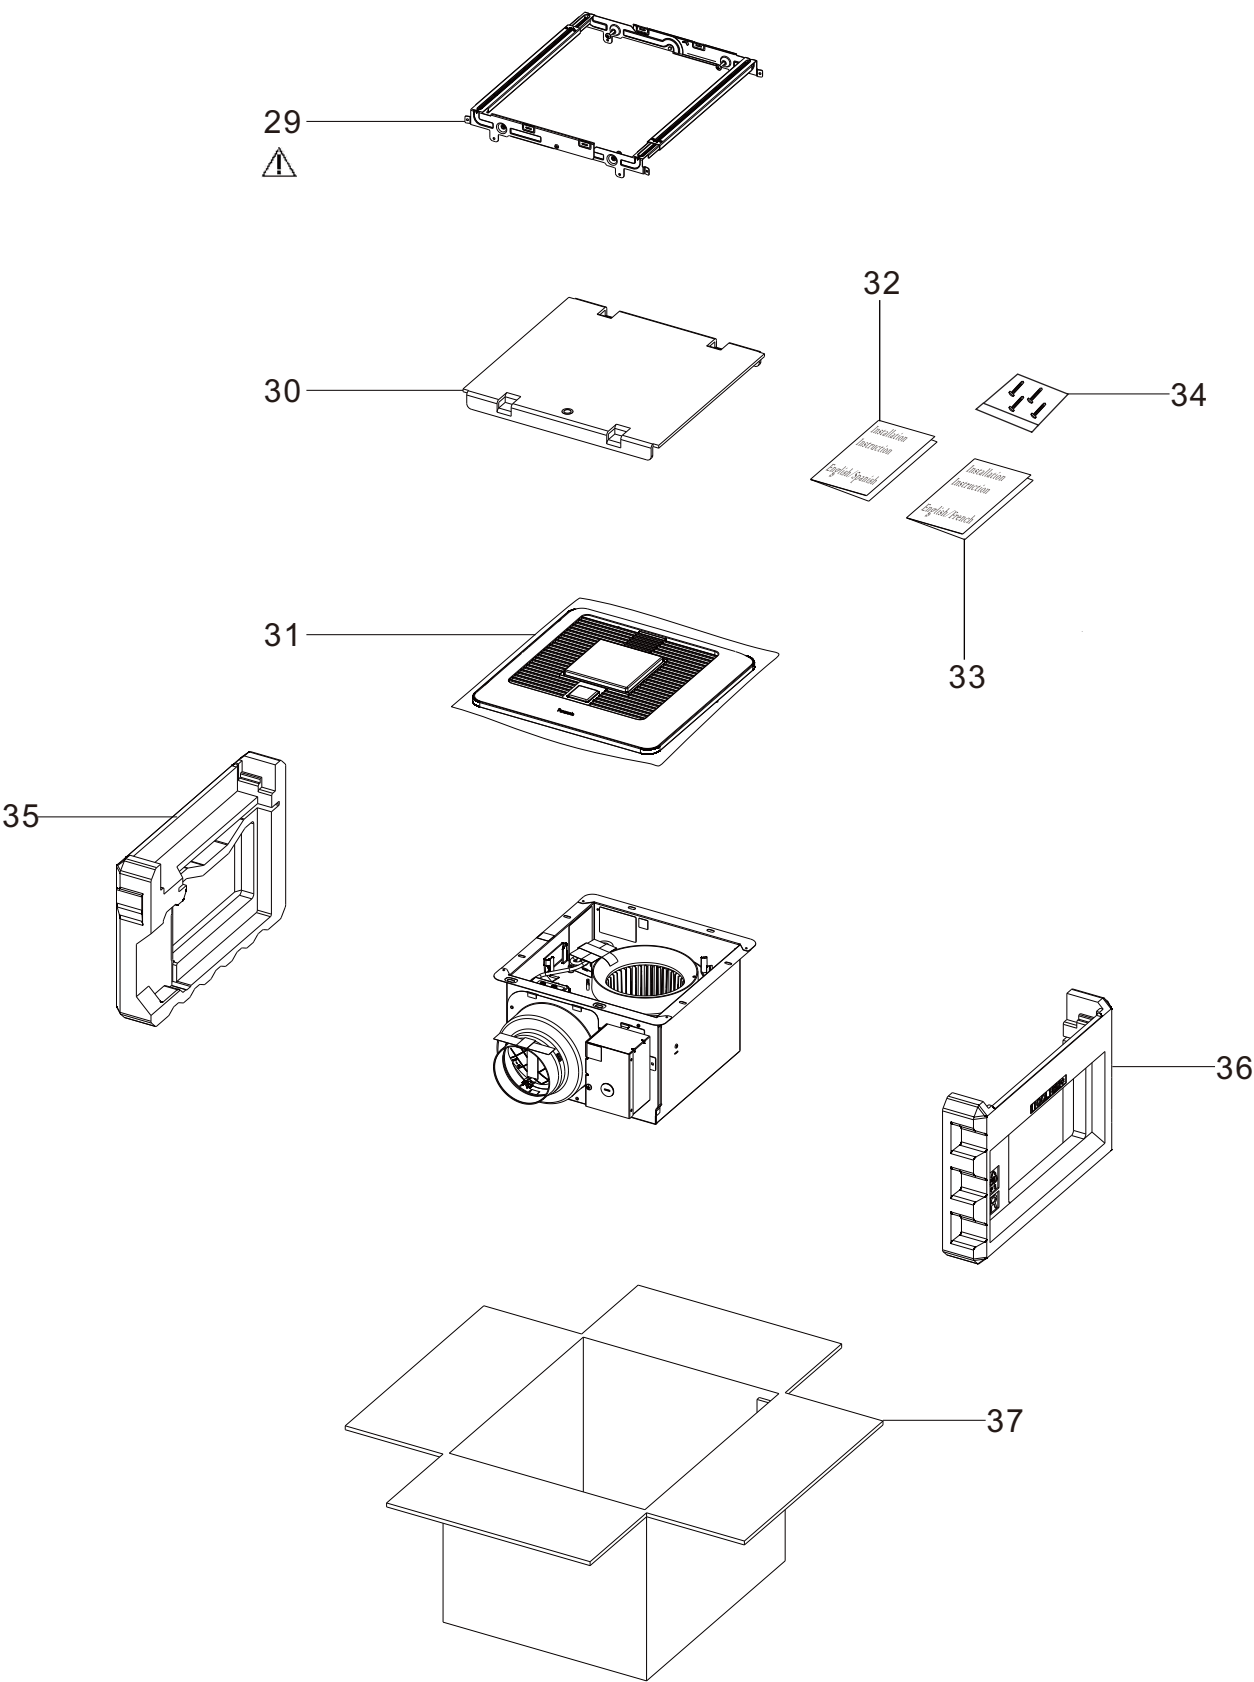

3.Wiring Diagram

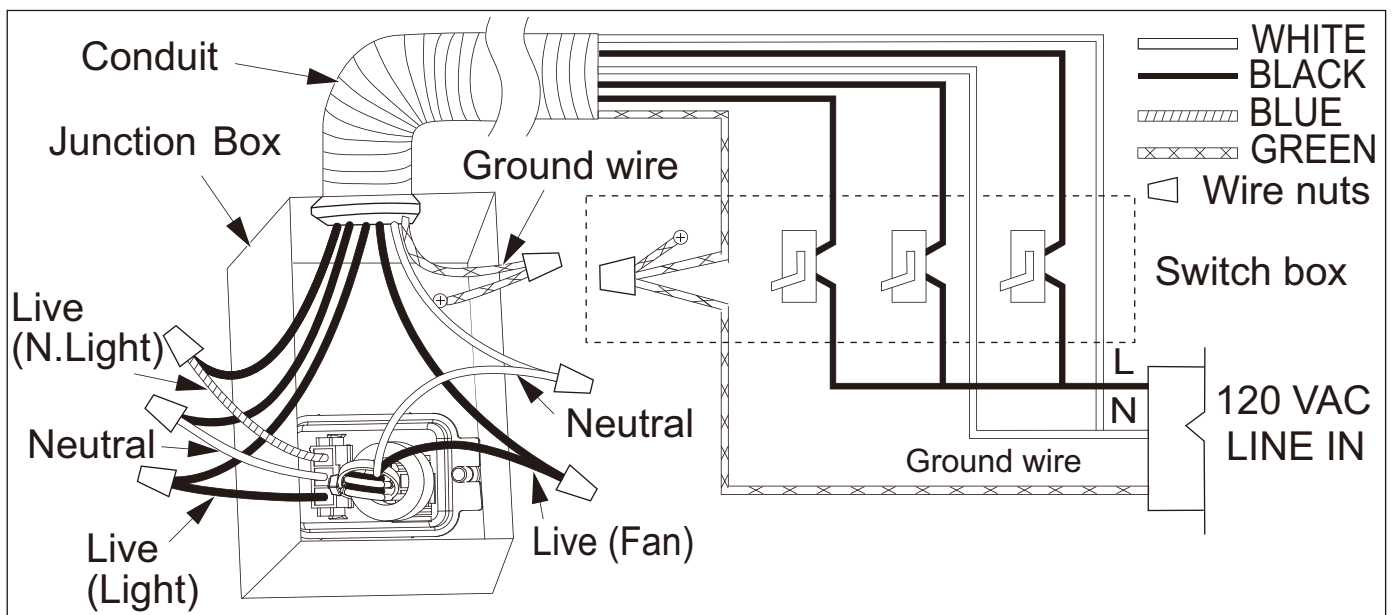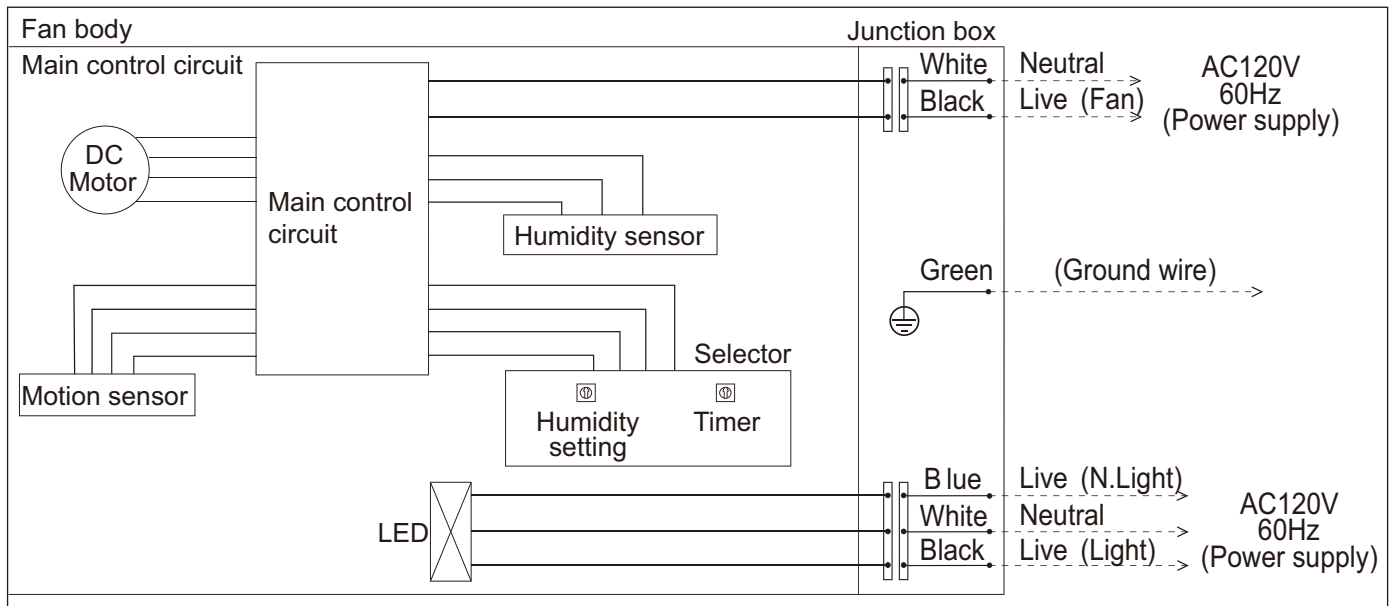

4. Parts List

FV-0511VQCL1

Main Body Section

No.	Part No.	Part Name	Q'ty	Remark
1	FFV11QCL1900C	Frame Assembly	1	
2	FFV11QCL1910	Adapter Assembly	1	⚠
3	FFV11QCL1913	Connector Plate	1	
4	FFV11QCL1331	Ground Wire	1	⚠
5	FFV11QCL1301A	Connector Assy	1	⚠
6	FFV11QCL1341A	Connector Assy (L)	1	⚠
7	FFV11QCL1912A	Junction Cover	1	
8A	FFV11QCL1M20A	Motor	1	Version A ⚠
8B	FFV11QCL1M21AX	Motor	1	Version B ⚠
9	FFV11QCL1904C	Motor Support Assy	1	
10	FFV0400114S	Blade	1	
11	FFV7020021S	Nut	1	
12	FFV11QCL1906B	Casing Section	1	
13A	FFV0511VQCL1UPCB	Main PCB section	1	Version A ⚠
13B	FFV11VQCL1PCB	Main PCB section	1	Version B ⚠
14	FFV0511VQCL1A	Grill Assembly	1	
15	FFV3400148S	Led Unit	1	⚠
16	FFV13KML3996C	Sensor Cover	1	
17	FFV0511VQCL1S	Grill Section	1	
A	FFVXYM4-E8FJ	Screw (M4-8)	1	⚠
B	FFVXTT4-8FFJ	Screw (ST4-8)	5	
C	FFV7000089S	Screw (ST4-12)	9	
D	FFVXYM4DC8BN	Screw w/washer(M4-8)	1	⚠
E	FFV7000065S	Screw (M4-12)	2	

Main PCB Section

No.	Part No.	Part Name	Q'ty	Remark
18	FFV11QCL1991D	Main PCB Box	1	⚠
19	FFV11QCL1560	S.W PCB Assy Set	1	⚠
20	FFV11QCL1540	Motion Sensor	1	⚠
21	FFV11QCL1992C	Main PCB Cover	1	⚠
F	FFVXTN3-8GFJ	Screw (M3-8)	3	

4. Parts List

FV-0511VQCL1

Main Label

No.	Part No.	Part Name	Q'ty	Remark
22	FFV11QCL1011A	Switch Label	1	
23	FFV11QCL1012A	CFM Label	1	
24A	FFV11QCL1050	Name Plate	1	Version A
24B	FFV11QCL1050M	Name Plate	1	Version B
25	FFV0810011S	Caution Label 1	1	
26	FFV0810010S	Caution Label	1	
27	FFV6730045S	Warning Label	1	
28	FFV2260003S	Holograph Label	1	

Packing Section

No.	Part No.	Part Name	Q'ty	Remark
29	FFV11QCL1920	Hanger Assy	1	
30	FFV4710381S	Grill Pad Assy	1	
31	FFV4650016S	Poly Cover	1	
32	FFV11QCL1420B	Installation Inst	1	English / Spanish For USA Market
33	FFV11QCL1421	Installation Inst	1	English / French For CANADA Market
34	FFV11KSL1M031A	Accessory A	1	
35	FFV11QCL1891	Left Pad	1	
36	FFV11QCL1892	Right Pad	1	
37	FFV11QCL1400B	Packing Case Assy	1	